




ASSEMBLY INSTRUCTIONS FOR 32503

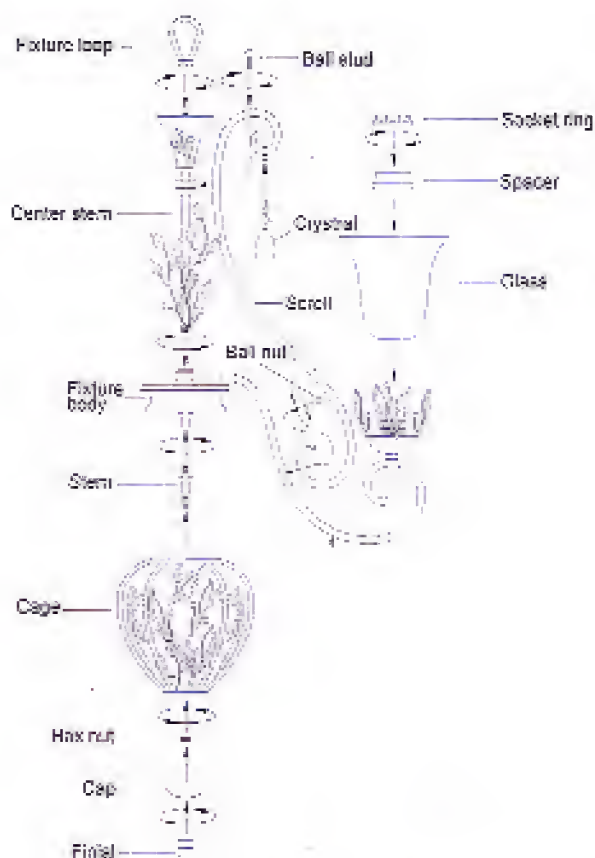

1. Before beginning the assembly, carefully unpack and identify all parts referring to the illustration.
2. Turn power to the installation point **OFF**.
3. Unravel the supply power and ground wires and pass the holes of center stem and fixture loop.
4. Thread center stem into the coupling at middle of fixture, then fixture loop into center stem.
5. Line up the holes of scroll with the hole of center stem and small nipple at arm of fixture body, and secure with ball stud and ball nut as shown in the diagram.
6. Thread stem into the coupling at bottom of fixture body.
7. Raise cage up the stem against the bottom of fixture body, and secure with hex nut.
8. Place cap over the stem and secure with finial.
9. Install glass into each socket and secure with spacer and socket ring.
10. Install proper bulbs (not provided) to each socket referring to the markings and labels on fixture for maximum wattage.
11. Restore power to the installation point **ON**. Retain this sheet for future reference.